

Integration Manager Quick Start Guide

The Mach7 Integration Manager is a downloadable application which enables integration between the Universal Worklist and the eUnity viewer. Settings such as preferred browser and saving layouts can be configured in the application.

Workstation Requirements

• All workstations running Integration Manager will require .NET version 4.5 or higher be installed.

Installation

To download and install the M7T Integration Manager:


1. From within Diagnostic Studio, select **Download M7T Integration Manager** from the Tools dropdown menu on the Main Worklist screen.

7 D	agnostic Stud	lio Worklist 🗸	Tools - Search
▼ GREEN HILL ED WORKLIST III (11)			DICOM Query/Retrieve
Accession		DOB	
	^ X	>=)	Export •
	ACC8885	10/30/1944	
	ACC4835	1/4/1956	Manage Keywords
	ACC1876	5/27/1942	
	ACC9314	11/12/1942	My History
	ACC4128	11/12/1942	
	ACC2258	11/12/1942	My Worklist
	ACC9807	11/12/1942	
	ACC1814	11/12/1942	Download M7T Integration Manager
	ACC2258	11/12/1942	C
	ACC4628	10/30/1944	Chat
	ACC4994	9/22/1941	MRN3039 DORSEY^ANNIE

- 2. Choose whether to run or save and launch the M7T Integration Manager installer when prompted.
- 3. Run the Mach7 Integration Manager Setup will launch and continue through the installation wizard to install the Mach7 Integration manager. When prompted, enter the IP or Fully Qualified Domain Name (FQDN) of the server hosting the Mach7 Enterprise Imaging Platform.



Configuring Layouts

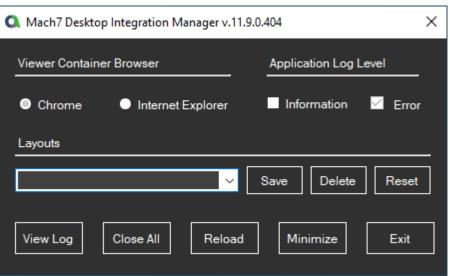

- Save: To save a new Layout, the user will position their browser windows as desired, enter a new name in the Layouts dropdown menu, then click the Save button. Any layout saved will be available to any user who logs into the workstation.
- Delete: To delete an existing Layout, select the desired Layout from the Layouts dropdown menu, then click the Delete button.
- Reset: Clicking the Reset button will move all the browser windows for the currently selected Layout to the 0x0 position.

NOTE: For workstations with high resolution monitors, ensure that the Windows scaling is set to 100% for any monitor that will be using the eUnity viewer prior to saving the layout. This setting is found under the Scale and Layout section in the Windows Display Settings.

Scale and layout

Change the size of text, apps, and other items

100% ~

Using Integration Manager

- 1. Launch Integration Manager by double-clicking on the icon on your desktop
- 2. The application will automatically minimize to the system tray when loaded. If multiple layouts are saved, the application will use the last loaded layout
- 3. Open studies from Diagnostic Studio



MACH7T.COM